



## ISLAND RANGE HOOD CHIMNEY EXTENSION INSTALLATION INSTRUCTIONS

### How the chimney extension works:

The extension of the standard chimney height is accomplished by adding an additional lower decorative chimney-piece to the standard configuration which consists of the standard upper chimney section with vent slats in the one end and the standard lower chimney section. Before you start, ensure that there are two lower chimney sections and an upper chimney section. You will have to drill a few holes in the sides of the decorative chimneys towards the back of these. Do not remove the protective covering from the chimney sections until the following steps have been completed:

**\*Please Note:** Chimney extensions for Island Range Hoods are **decorative only**. A wooden support must be built down from ceiling joists to attach the main mounting frame that has a max length shown.

(refer to figure 1 & 2)

For more information please contact:

**Sirius Range Hoods Technical Support at 866-528-4987.**

### Preparation:

Measure the length of decorative chimney required from the body of the hood to where the decorative chimneys must end – this is normally at the ceiling. Find a perfectly flat, level and clean surface at least the length of the decorative chimney that is required. Please ensure that if the plastic has been removed from the chimney sections, a soft material is placed under the sections so as not to scratch the surface. Lay the decorative chimney sections out, end to end, with the section with grills in (the upper section) in the middle. All sections should have the inside facing up.

1. Insert the chimney section into the standard lower chimney section with the vent slats inside the lower chimney section – the vent slats are only required for a ductless installation and can therefore be “hidden” IF you have sufficient length of decorative chimney – if not, you will need to purchase an additional upper chimney section.
2. Slide the additional lower chimney section over the upper chimney section.

Sirius Range Hoods (USA) Ltd.

North American Importer/Distributor

1051 Clinton Street, Buffalo NY 14206

Toll free: +866 528-4987 Fax: +866 365-9204

<http://www.siriushoods.com>

email: [info@siriushoods.com](mailto:info@siriushoods.com)




3. Now adjust the three pieces so that the length is equal to the overall length required for the decorative chimney. Ideally there should be three equal sections and the overlap of each section should be at least 1.5". Depending on the length required, the vent slats may be exposed or not. Adjust as required. Before proceeding to Step 4, ensure that when you look down the length of all three sections that they are perfectly straight. This is very important to ensure the decorative chimney when installed is not crooked.
4. Once satisfied that the length and line up is correct, drill a 1/8" hole on the sides, at the center, through both the additional lower chimney and the upper chimney section. Fit the appropriate metal screws (not provided) through these drilled holes. The purpose of this is to restrict the upper chimney section from sliding down once the additional lower chimney section is fitted to the ceiling bracket.
5. The standard lower chimney section should not be fixed or worked on at all. You only need to 'join' the additional lower chimney section to the upper chimney section. The standard lower chimney section must be permitted to slide freely to allow installation.
6. Finally, using the ceiling mount bracket from the hardware kit as a template, drill two 1/8" holes that will line up with those at the end of the 'wings' on the ceiling mount bracket. This will enable you to attach the connected additional lower chimney section and the standard upper chimney section to the ceiling.
7. Now install the two chimney sections (the connected one and the standard lower one) as per the installation instructions.



**Sirius**  
Range Hoods

Flat Ceiling Example

Figure 1

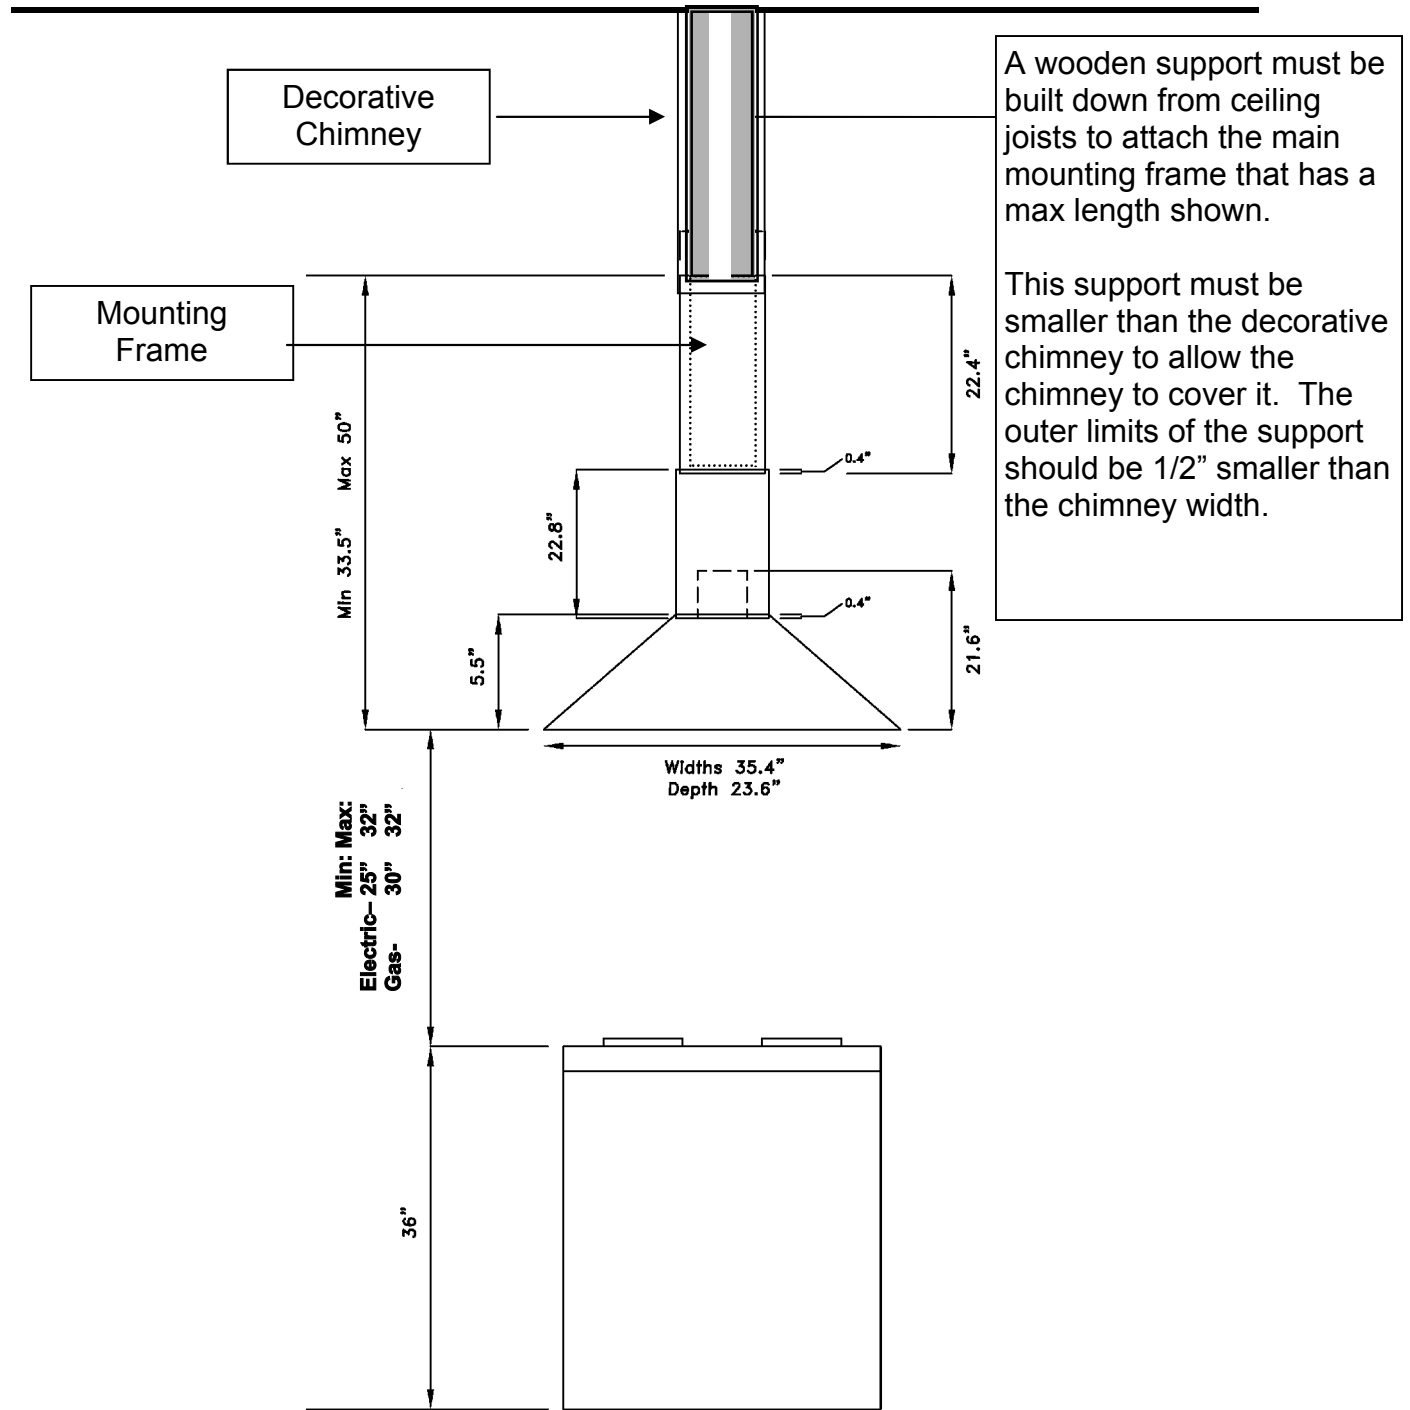



**Sirius**  
Range Hoods

Sloped Ceiling Example  
Figure 2

